

Model MRMS

Multi-Room Monitoring Station

The Setra MRMS provides a central location to view critical room conditions for up to eight rooms with configurable audible/visual alarms. The MRMS' 4.3" color LCD touchscreen is easy to navigate and ideal for any healthcare facility that needs to monitor critical room status from a central nurses location. The MRMS significantly reduces installation setup through its Auto-Discover feature, which automatically finds and connects to other Setra BACnet products and imports all MAC addresses, BACnet objects, naming conventions and other setup parameters.

Display Real-Time Feedback for up to 8 Rooms

Modern healthcare requires nursing and facilities professionals to monitor just about everything from the patient status to the condition of patient rooms. People can't be in two places at once, which is why Setra designed the MRMS, providing a central location to monitor the environmental condition for up to 8-rooms from a single device. The MRMS displays real-time data and provides an audible and visual alarm for the people who need it most: nurses and maintenance staff.

No Set-Up Required - Auto Discover Your Rooms Through BACnet

The MRMS has a unique "Auto-Discover" feature that allows the installer to quickly locate any of Setra's SRCM or SRPM series room pressure monitors with a click of a button. This feature uses the BACnet MS/TP protocol to discover any Setra unit and retrieves the data automatically. The auto-discover feature saves time and headaches when trying to ensure each unit is properly installed.

Easy-to-Use Touchscreen

The MRMS has a 4.3" touchscreen user interface that makes setup and looking up the important information quick and easy. The user can see the present room condition at a glance and with one touch can access the other parameters that are displayed at the room.



- Maximize Patient Safety
- Save on Installation Costs
- Reduce Burden on Nursing Staff

Model MRMS Features:

- Monitor 8 Rooms from 1 Device thru BACnet MSTP
- 4.3" Color Touch Screen for Easy Room Navigation
- Auto-Discover Feature Reduces Installation Time
- Configurable Audible/Visual Alarms
- IP-54 Wipe-Down Flush Mount Design

Where We're Installed:

- Jewish General Hospital
- Mayo Clinic
- Naval Hospital Camp Pendleton
- St. Judes Childrens Hospital
- Veterans Affairs (VA) Medical Center

Model MRMS

Multi-Room Monitoring Station



ORDERING INFORMATION


M R M S -

Model	Face Plate Logo		
MRMS = MRMS	Std.	S	Setra
	Opt.	B	Blank/No Logo



Ordering Example: MRMS = Model MRMS with Setra logo on Face Plate.

DIMENSIONS

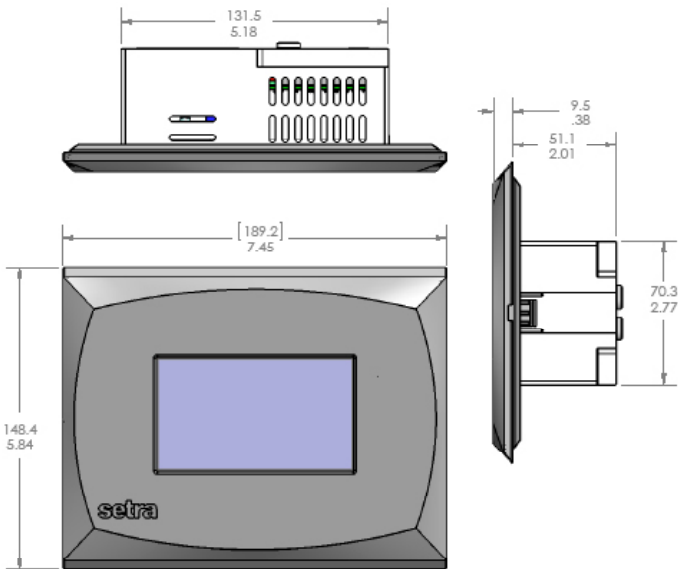

GENERAL SPECIFICATIONS

Physical Description		Environmental Data	
Case	Fire Retardant Plastic UL94V-0	Operating Temp. °F (°C)	32 to +120 (0 to +50)
Dimensions	5.84"H x 7.45"W x 0.38"D	Storage Temp. °F (°C)	-20 to +160 (-30 to +170)
Mounting	Standard Triple Gang Double-Deep-Electrical Box	Operating Humidity	5 to 95% RH (Non-Condensing)
Weight	1 lb 2 oz (482 grams)	Electrical Data (Voltage)	
Display	Touchscreen LCD 4.3" TFT, 480 x 272	Power Input	18-32 VAC, 50-60Hz
Communications		Power Consumption	10W
BACnet®	MS/TP ASC	Circuit	2-Wire (Exc, Com)
Certifications			
CE	Conforms to European Pressure Directive		
CSA	CAN/CSA - C22.2 No. 61010-1-04 ANSI/UL 61010-1, 3rd Edition		

Specifications subject to change.