



# Power Meter Fused Leads Fused Lead Assembly

The mounting rail holds the power meter and fuse block assembly which provides supplementary protection between the three phase main's voltage leads and Setra's Power Patrol. The accessory kit comes with a 12" DIN rail, mounting screws, four (4) fuse blocks with 250mA fuses installed and a bag of 4 replacement fuses. Four 14 gauge wires are pre-installed to the fuse block for fast wiring to the power meter.

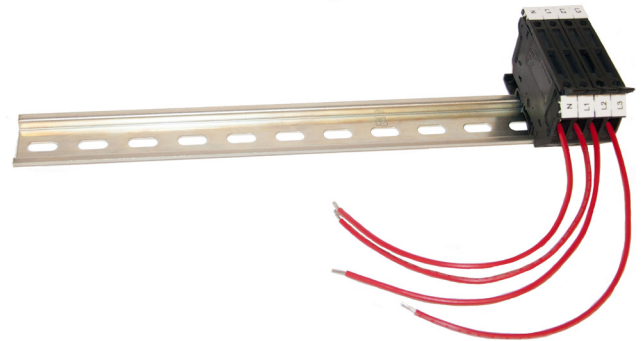

- Modular Fuse Block – 4 pole
- Fuse block labeling: N, L1, L2, L3
- 600VAC nominal rating for fuse blocks
- 0.250A Fuses pre-installed with bag of four spare fuses included
- DIN rail for power meter and fuse block mounting (12 in. length)
- 14 AWG, 600V rated red wires pre-terminated to fuse blocks, stripped on loose end
- Two #8 x 1/2" sheet metal screws in a bag for mounting DIN rail to control cabinet mounting plate

## DIMENSIONS

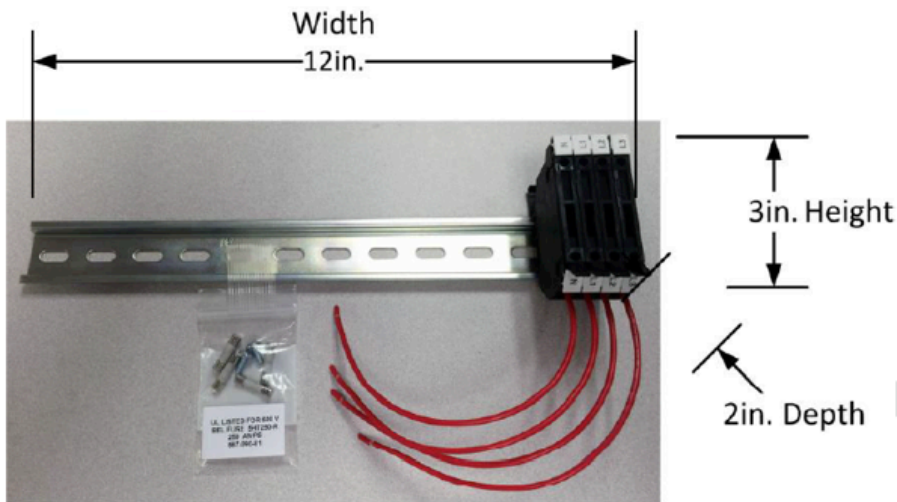

**Exterior Dimensions**

## ORDERING INFORMATION

Model	Description
SPP-ACC-Fuse-600	Fuse Leads 600 VAC