

AIR

W a t c h



Setra AIR Watch

Portable HEPA & UV-C Air Purifier

Features

- 18" W x 18-1/2" D x 25" H (including wheels)
- Portable with locking casters
- Easy installation
- Circulates air at 350 cubic feet per minute (CFM)
- Quiet (55-58 dBA)
- Instant visual filter clog alert
- Self contained unit with true HEPA filter and UV-C, sanitizes air by neutralizing up to 99.99% effectiveness on virus and bacteria, certified via Nationally Testing Laboratory (NRTL)

Applications

- Classrooms and school nurses offices
- Long-term Care Facilities and Nursing Homes
- Doctor offices or Dentist offices
- Salons and Spas
- Any professional or Healthcare space looking to help keep customers/patients safe



Comprehensive Air Purification Solution

The Setra AIR Watch sterilizes the air via the powerful combination of UVC light to inactivate any harmful aerosols and HEPA filter to remove particles. This 99.99% sterilized air can then be recirculated to help clean contaminated air in any space.

Specifications

General

Sterilization	99.99% Effective on viruses and bacteria in exhaust air, certified via NRTL
Sterilization method	HEPA filter removes particles as small as 0.3 microns and UVC light neutralizes viruses and bacteria.

Physical Description-Module

Dimensions	18"W x 18-1/2" D x 25" H (including wheels)
Power requirements	120VAC or 230VAC, 50/60 Hz
Power cord (length)	6 ft grounded power cord
Housing	18 Ga Steel
Finishing	Matte white with light texture
Weight	55 lbs

Performance

CFM	350 CFM (avg)
Sound level	58 dBA

Features

Portability	2 locking casters, 2 non-locking casters
Filter alert	On unit filter alert light ring provides green/yellow indication of filter health, expected replacement 1 year
Safety switch	Unit automatically shuts off if top cover back-left screw is loosened or removed
UV bulb functionality alert	Unit automatically shuts off if one or both UV bulbs are not present or not functioning On unit filter alert light ring turns red after 7500 hours to provide 500 hours for replacement before bulb end of life

Environmental data

Operating temp	32°F - 120°F
Storage temp	32°F - 120°F
Operating humidity	NA

Ordering information

Contact Setra at orders@setra.com for more information on how to order.

Specifications subject to change without notice.

Ordering information



[1]		[2]		[3]	
Model		Configuration		Package	
AIIR	AIIR Watch	06	6" Blower 120V, NEMA 5-15 Plug	NN	Air Purifier Unit
		16	6" Blower, 230V, BS 1363 Plug		
		26	6" Blower, 230V, CEE 7/7 Plug		
		36	6" Blower, 230V, NEMA 10-50 Plug		

What is Included


AIIR06NN AIIR Watch Air Purifier Unit, with power cord and filter alert within the unit



Plug Type




NEMA 5-15

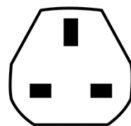

BS 1363



CEE 7/7

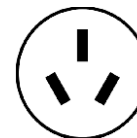

NEMA 10-50