

## RETURNING PRODUCTS FOR REPAIR

Please contact a Setra application engineer (800-257-3872, 978-263-1400) before returning unit for repair to review information relative to your application. Many times only minor field adjustments may be necessary. When returning a product to Setra, the material should be carefully packaged, and shipped to :

Setra Systems, Inc.  
159 Swanson Road  
Boxborough, MA 01719-1304  
Attn: Repair Department

To assure prompt handling, returned unit(s) must be accompanied by Setra's Return Order Form, completely filled out, found on Setra's web site at [http://www.setra.com/tra/repairs/cal\\_rep.htm](http://www.setra.com/tra/repairs/cal_rep.htm).

Notes: Please remove any pressure fittings and plumbing that you have installed and enclose any required mating electrical connectors and wiring diagrams.

Allow approximately 3 weeks after receipt at Setra for the repair and return of the unit.

Non-warranty repairs will not be made without customer approval and a purchase order to cover repair charges.

### Calibration Services

Setra maintains a complete calibration facility that is traceable to the National Institute of Standards & Technology (NIST). If you would like to recalibrate or recertify your Setra pressure transducers or transmitters, please call our Repair Department at 800-257-3872 (978-263-1400) for scheduling.

## WARRANTY AND LIMITATION OF LIABILITY

SETRA warrants its products to be free from defects in materials and workmanship, subject to the following terms and conditions: Without charge, SETRA will repair or replace products found to be defective in materials or workmanship within the warranty period; provided that:

- the product has not been subjected to abuse, neglect, accident, incorrect wiring not our own, improper installation or servicing, or use in violation of instructions furnished by SETRA;
- the product has not been repaired or altered by anyone except SETRA or its authorized service agencies;
- the serial number or date code has not been removed, defaced, or otherwise changed; and
- examination discloses, in the judgment of SETRA, the defect in materials or workmanship developed under normal installation, use and service;
- SETRA is notified in advance of and the product is returned to SETRA transportation prepaid.

Unless otherwise specified in a manual or warranty card, or agreed to in writing and signed by a SETRA officer, SETRA pressure and acceleration products shall be warranted for one year from date of sale. The foregoing warranty is in lieu of all warranties, express, implied or statutory, including but not limited to, any implied warranty of merchantability for a particular purpose. SETRA's liability for breach of warranty is limited to repair or replacement, or if the goods cannot be repaired or replaced, to a refund of the purchase price. SETRA's liability for all other breaches is limited to a refund of the purchase price. In no instance shall SETRA be liable for incidental or consequential damages arising from a breach of warranty, or from the use or installation of its products.

No representative or person is authorized to give any warranty other than as set out above or to assume for SETRA any other liability in connection with the sale of its products.

SS-CCM Rev. A 03/01/13

159 Swanson Road, Boxborough, MA 01719/800-257-3872;  
Fax: 978-264-0292; Email: [sales@setra.com](mailto:sales@setra.com)/Web: [www.setra.com](http://www.setra.com)

# setra CCM Series - Current Switch Clamped Mini Model CCMF015 Installation Instructions

## Introduction

The Current Switch Clamped Mini (CCM) Series of digital output switches are noninvasive devices designed to detect low current flowing through a cable or wire. A cost effective solution for monitoring on and off status or proof of operation, these units are ideal for monitoring small current loads on motors driving fans and blowers, and for sensing the status of heating coils and lighting.

These units provide a universal solid state output and do not require a power supply. Excitation is magnetically induced from current carrying conductor (wire or cable), making these units completely self-powered.

**IMPORTANT:** The Current Switch Clamped Mini (CCM) Series Current Devices are intended to provide an input to equipment under normal operating conditions. Where failure or malfunction of the CCM could lead to personal injury or property damage to the controlled equipment or other property, additional precautions must be designed into the control system. Incorporate and maintain other devices such as supervisory or alarm systems or safety, or limit controls intended to warn of, or protect against, failure or malfunction of the CCM.

## Installation

**WARNING: Risk of Electric Shock**  
Disconnect power supply before making electrical connections. Contact with components carrying hazardous voltage can cause electric shock and may result in severe personal injury or death.

## Dimensions

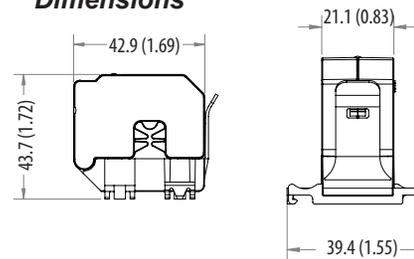


Figure 1: CCM Dimensions mm. (in.)

## Mounting

- Using the two screws (included), attach the mounting bracket to the back of the electrical enclosure.
- Snap the CCM into place on the mounting bracket.

## Wiring

- Disconnect power to the conductor cable from the power source.
  - Snap the split core around the power conductor cable, and close the core until the core snaps shut.
- Note:** The switch contacts are solid state, and they work just like dry contacts. When the switch is closed, less than 1 ohm is present; when the switch is open, more than 1 megohm is present.
- Wire CCM output terminals to the control box Digital Input (DI) terminal (30 VAC/42 VDC max. terminal voltage).
  - Reconnect the power conductor cable (For wiring example, see Figures 2.)

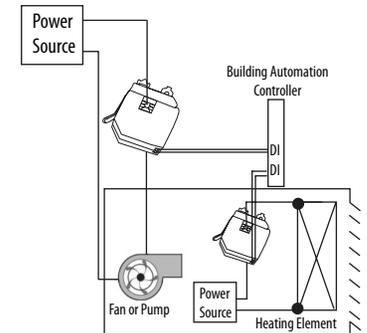


Figure 2:  
CCMF015

If the measured current is too low to be detected or is higher than the maximum current rating of the CCM, use the following methods to increase or decrease current.

**If Measured Current is Too Low to be Detected**

Wrap the conductor (wire) through the sensing hole and around the CCM body to produce multiple turns to increase the measured current. Measured current = actual current times the number of turns (see Figure 3).

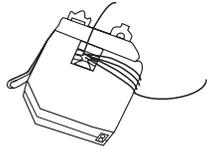


Figure 3: CCM Shown with Four Turns

**IMPORTANT:** Failure to derate the current capacity could result in damage to the CCM when using multiple turns to increase measured current. Use the following formula to determine the new maximum current:

New Maximum Current = CCM Current Rating/number of turns  
 For example, Model CCMF015 with 4 turns = 60 A/4 = 15 A, new maximum current.

**To Monitor Currents Exceeding the Maximum Current Rating of the CCM**

For currents >60 A (Model CCMF015)

Use a 5 A Current Transformer (CT) to reduce the current passing through the CCM as shown in Figure 4. Run the current transformer secondary wire through the sensing hole. Terminate the 2 secondary wires of the 5 A current transformer to each other, and then install the 5 A current transformer on the monitored conductor.

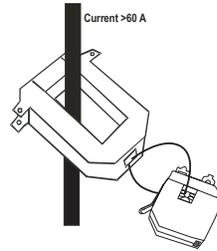


Figure 4: CCM with CT Transformer

**Troubleshooting**

Table 1: Troubleshooting

Symptom	Action
CCM solid state output does not function	Verify the maximum amperage range has not been exceeded. Voltages or currents above the rated levels may damage the CCM.
Motor is turned on and switch does not close	Insufficient current to the load leads ( for example, a motor or heater) to reach the setpoint threshold. To turn the switch on, wrap the cable multiple times through the sensing hole (see Figure 3).

**Technical Specifications**

**Model CCMF015**

	CCMF015
Amperage Range	0.15 to 60 A
Continuous Operating Current	60 A, Max.
Switch Setpoint	Fixed
Output Relay	No
Actuation Coil	No
LED Indication	No
Current Switching Mode	Under current sensing.
Trip Setpoint Value	0.15 A
Sensor Supply Voltage	Induced from power conductor cable.
Status Output	Switch normally open.
Switch Load Capacity	30 VAC/42 VDC max. 1 A max
Isolation Voltage	300 VAC rms, insulated conductors only
Temperature Range	5 to 140°F (-15 to 60° C)
Frequency Range	50/60 Hz
Humidity Range	0 to 95% non-condensing
Dimensions	1.72 x 1.69 x 0.83 in. (43.7 x 42.9 x 21.1 mm)
Compliance	United States: UL Listed, File E317719, CCN NRNT, Under UL 508, Industrial Control Equipment
	Canada: UL Listed. File E317719 CCN NRNT7, Under CAN/CAS C22.2 No. 14-05, Industrial Control Equipment
	Europe: CE Mark LVD 2006/95/EC, EMC Directive 2004/108/EC

The performance specifications are nominal and conform to acceptable industry standards. For application of conditions beyond these specifications, consult your local Setra representative. Setra Systems, Inc. shall not be liable for damages from misapplication or misuse of its products.

For all CE technical questions, contact Setra Systems, USA. EU customers may contact our EU representative Hengstler GmbH, Uhlandstr 49, 78554 Aldingen, Germany (Tel: +49-7424-890; Fax: +49-7424-89500).